



FEATURES

- Dual Tally Counters
 - Two separate tally counters.
 - Counts up to 19,999.
 - Calculates difference and total values.
 - Selects + or - to add or subtract the values.
- Dual Countdown Timers
 - Two separate countdown timers run independently or simultaneously.
 - Counts down from 199 hour 59 min 59 sec.
- Dual Time Zones
 - Time, date, day, month, year and 12/24 hour.
 - Two daily alarms for each time zone.
- Displays time remaining in percentage showing.
- Beep sound or silent operation.
- Lock feature protects the values from accidentally resetting.

TO SET THE COUNTDOWN TIMER

- Press M button to reach ▼ mode.
- Press C button and the digits in the TIMER 1 row will flash.
- Press G button to select IND or SIM symbol.
- Press C button to increase the seconds.
 - Press F button to decrease the seconds.
- Press B button to increase the minutes.
 - Press E button to decrease the minutes.
- Press A button to increase the hours.
 - Press D button to decrease the hours.
- Hold A on B on C on D on E on F on button for rapid advance.
- Hold both A and B button to reset to 0.
- Press M button and the digits in the TIMER 2 row will flash.
- Press the button to proceed again as described above.
- Press M button to complete the setting.

TO SET THE TIME & CALENDAR

- Press G button to reach Dual Time Zones mode.
- Press G button again to select HOME or LOCAL time Zone.
- Press C button and the time will flash.
- Press M button to select AM/PM (12hour) or H (24 hour).
- Press C or F button to reset the seconds to 0.
- Press B button to increase the minutes.
 - Press E button to decrease the minutes.
- Press A button to increase the hours.
 - Press D button to decrease the hours.
- Hold A on B on D on E button for rapid advance.
- Press G button and the calendar will flash.
- Press A button to increase the year.
 - Press D button to decrease the year.
- Press B button to increase the month.
 - Press E button to decrease the month.
- Press C button to increase the date.
 - Press F button to decrease the date.
- Hold A or B or C or D or E or F button for rapid advance.
- Press G button to complete the setting.

TO SET THE DAILY ALARMS

- Press F button repeatedly to view the alarm time (1 or 2).
- Press C button and the digits will flash (1 appears).
- Press B button to increase the minutes.
 - Press E button to decrease the minutes.
- Press A button to increase the hours.
 - Press D button to decrease the hours.
- Hold A or B or C or E button for rapid advance.
- Press G button and the digits will flash (2 appears).
- Press the button to proceed again as described above.
- Press G button to complete the setting.
 - To view the alarm time:
 - Press F button repeatedly to view the alarm time (1 or 2).
 - Press G button to return to the normal time.
 - To set alarms ON or OFF:
 - HOME (1) Press A to appear or disappear the symbol.
 - (2) Press B to appear or disappear the symbol.
 - LOCAL (1) Press D to appear or disappear the symbol.
 - (2) Press E to appear or disappear the symbol.
 - Beep alarm will sound for 30 seconds at the preset time.

HOW TO OPERATE

TC mode

- Press M button to reach TC mode.
- Press C button to select the + or - symbol.
 - Press B button to increase or decrease the count by 1 in the (1) row.
 - Press E button to increase or decrease the count by 1 in the (2) row.
- Press A or D button to reset to 0 in the (1) or (2) row.
 - Press B button to increase or decrease the count.
 - Press E button to increase or decrease the count.
- Press F button to appear DIFF & TOTAL symbol.
 - Indicates difference and total values of the two counters.
- Press F button again to return to TC display.

▼ mode

- Press M button to reach ▼ mode and the display shows IND symbol.
 - Press B button to start & stop time in the TIMER 1 row.
 - Press A button to reset to the original setting.
 - Press E button to start & stop time in the TIMER 2 row.
 - Press D button to reset to the original setting.
- Press M button to reach ▼ mode and the display shows SIM symbol.
 - Press B or E button to start & stop in the TIMER 1 & TIMER 2 rows.
 - Press A or D button to reset both TIMER 1 & TIMER 2 rows to the original settings.
- Alarm sound for 30 seconds will activate upon completion and the display returns to the original setting.

Beep alarm in ▼ mode

- Alarm sound for 30 seconds will activate upon completion.
- And, the display returns to the original setting.

Percentage % in ▼ mode

- Press F button to display time remaining in % showing.
- Press F button again to return to countdown time.

STOP symbol

- Time in counting: STOP disappears.
- Time stopped: STOP appears.
- Countdown time set: STOP flashes.



- Hold G button 3 seconds and the ((●)) symbol will either appear or disappear.
 - When the ((●)) symbol appears, beep and alarm sound will activate.
 - When the ((●)) symbol disappears, beep and alarm will not sound.
- Hold M button 3 seconds and the (M) symbol will either appear or disappear.

BATTERY REPLACEMENT

- Remove the battery cover on the back side of the body.
- Remove and replace battery with type AAA.
- Replace the battery cover and lock into place.