



FEATURES

- 1.Count Up Timer:Counts up to 99 min 59 sec.
- 2.CountDown Timer:Counts down from 99 min 59 sec.
- 3.Displays time remaining in % percentage showing.
- 4.Beep sound or silent operation.
- 5.Lock feature protects the values from accidentally resetting.

MODES CIRCULATION

- 1.Press M button to reach ▲ mode.
- 2.Press M button again to reach ▼ mode.

TO SET COUNTDOWN

- 1.Press M button to reach ▼ mode.
- 2.Press B button to increase (+) the seconds.
Press D button to decrease (-) the seconds.
- 3.Press A button to increase (+) the minutes.
Press C button to decrease (-) the minutes.
- 4.Hold A or B or C or D button for rapid advance.

HOW TO OPERATE

▲ mode

- 1.Press ◊ button to start counting.
- 2.Press ◊ button again to stop counting.
- 3.Press R button to reset to 0.

▼ mode

- 1.Press ◊ button to start counting.
- 2.Press ◊ button to stop counting.

- 3.Press G button to display time remaining in % showing.
- 4.Press G button again to return to countdown time.
- 5.Alarm sound for 30 seconds will activate upon completion and the display returns to the original setting.
- 6.Press R button to reset to the original setting.
- 7.Press R button again to reset to 0.

STOP symbol

- 1.Time in counting:STOP disappears.
- 2.Time stopped:STOP appears.
- 3.Countdown time set:STOP flashes.



- 1.Hold ◊ button 3 seconds and the ((•)) symbol will either appear or disappear.
 - a.When the ((•)) symbol appears, beep and alarm sound will activate.
 - b.When the ((•)) symbol disappears, beep and alarm will not sound.
- 2.Hold R button 3 seconds and the 🔒 symbol will either appear or disappear.

BATTERY REPLACEMENT

- 1.Remove the battery cover on the back side of the body.
- 2.Remove and replace battery with type AAA.
- 3.Replace the battery cover and lock into place.