



FEATURES

1. Tally Counter: Counts up from 0 or from any specified value.
View how many counted.
2. Programmable Counter: Counts down from 99999.
View how many remain or counted.
3. Selects + or - to add or subtract the count.
4. Clock: 12 hour or 24 hour format
5. ((●)): The ((●)) symbol appears to activate the beep and alarm sound.
6. Lock feature protects the values from accidentally resetting.

MODES CIRCULATION

1. Press M button to reach TC mode.
2. Press M button to reach PC mode.
3. Press M button to reach ((●)) mode.

TO SET THE TALLY COUNTER

1. Press M button to reach TC mode.
2. Hold A button 3 seconds and the digit will flash.
 - a. Press A button to shift the flashing digit.
 - b. Press diamond button to advance the digit.
 - c. Press B button to reset to 0.
3. Press M button to complete the setting.

TO SET THE PROGRAMMABLE COUNTER

1. Press M button to reach PC mode.
2. Hold A button 3 seconds and the digit will flash.
 - a. Press A button to shift the flashing digit.
 - b. Press diamond button to advance the digit.
 - c. Press B button to reset to 0.
3. Press M button to complete the setting.

TO SET THE CLOCK

1. Press M button to reach ((●)) mode.
2. Hold A button 3 seconds and minute digit will flash.
 - a. Press diamond button to advance the digit.
 - b. Hold diamond button 3 seconds for rapid advance.
 - c. Press B button to reset to 0.
3. Press A button and hour digit will flash.
 - a. Press diamond button to advance the digit.
 - b. Hold diamond button 3 seconds for rapid advance.

- c. Press B button to reset to P 1(12h) or 0(24h).
4. Press A button to display 12h or 24h.
5. Press diamond button to select 12h (A or P) or 24h.
6. Press M button to complete the setting.

HOW TO OPERATE

TC ▲ mode

1. Press M button to reach TC ▲ mode.
2. Press A button to select + or - symbol.
3. Press diamond button to increase or decrease the count by 1.
4. If counting from the specified value, press B button to appear DIFF symbol.
 - To view the value counted already.
5. Hold B button 3 seconds to reset to 0.

PC ▼ mode

1. Press M button to reach PC ▼ mode.
2. Press A button to select + or - symbol.
3. +/- symbol is to subtract/add the count.
4. Press diamond button to count down or count up the count by 1.
5. Press B button to appear ▼ or ▲.
 - To view the value remaining - ▼.
 - To view the value counted - ▲.
6. Hold B button 3 seconds to reset to preset value.

DEMONSTRATION

MODE	VALUE IN DISPLAY	COUNTED		REMAINS	COUNTED		MEMORY
		▲	DIFF		▼	▲	
TC	0 counts up to 75	75	75				NO
TC	50 counts up to 75	75	25				NO
PC	75 counts down to 50			50	25		YES

((●))

1. Hold both A and B button 3 seconds and the ((●)) symbol will either appear or disappear.
 - a. When the ((●)) symbol appears, each press of the button will have a beep sound.
 - b. When the ((●)) symbol disappears, each press of the button does not have a beep sound.
 - c. The PC mode counts down to the value of 10 will have a beep sound and the beep sound will alarm for 15 seconds upon completion even the ((●)) symbol disappears.
2. Hold M button 3 seconds and the lock icon symbol will either appear or disappear.

BATTERY REPLACEMENT

1. Remove the battery cover on the back side of the body with a coin or similar tool, using the arrows as direction indicators.
2. Remove and replace the battery with type LR44 or equivalent.
3. Be sure that "+" side is up.
4. Replace the battery cover and lock into place.