



FEATURES

- 1.Countdown timer counts from 1 second to 99min 59sec.
- 2.Tally Counter counts from 0 to 9999.
- Switch between + or – mode to add or subtract the count.
- 3.⏻:Power on/off button.
- 4.Sleep mode after 2 hours of inactivity to save battery power.
- 5.((•)): Beep confirmation sound is on when the symbol shows.
- 6.🔒:Lock feature prevents accidental modification.

MODE CIRCULATION

- 1.Remove battery insulation film first.
- 2.Press A&B at the same time to switch between Countdown Timer and Tally Counter modes

COUNTDOWN TIMER

HOW TO SET

- 1.Press B button to advance the seconds.
- 2.Press A button to advance the minutes.
- 3.Hold A or B button for rapid advance.

HOW TO OPERATE

- 1.Press ⬆ button to start counting.
- 2.Press ⬆ button again to stop counting.
- 3.Alarm will go off and last for 30 seconds upon completion. Display will also return to the original setting.
 - Press any button to silence the alarm.
- 4.When the timer is stopped, press RESET button to reset to the original setting.
- 5.Press RESET button again to reset to 0.

Note: A STOP sign will show when the timer is stopped, disappear when the timer is running, and flash when the timer is being set.

TALLY COUNTER

HOW TO OPERATE

- 1.Press + button to enter + mode and – button to enter – mode.
(+/- will show on the display)
- 2.In + mode, press ⬆ button to add the counter by 1.
- 3.In – mode, press ⬆ button to subtract the counter by 1.

HOW TO RESET

- 1.Press RESET button and a STOP sign will show on the display.
- 2.Press ⬆ button to count again and cancel reset.
- 3.Press RESET button again to reset the count to 0.

⏻ POWER ON/OFF

- 1.Hold RESET button 3 seconds to power OFF the display.
- 2.The display will blank when no activity has been detected for 2 hours.
- 3.Press any button to power ON the unit.

((•)) 🔒

- 1.Hold ⬆ button 3 seconds to turn the beep sounds on/off.
(((•))) symbol appears/disappears
- 2.Hold both ⬆ & RESET button 3 seconds to turn the lock feature on/off.
(🔒 symbol appears/disappears)

Note: when the 🔒 symbol shows, the only thing you can do is switching between Timer and Counter modes.

To use other features, you will need to unlock the device first.

BATTERY REPLACEMENT

- 1.Remove the battery cover on the back side of the body with a coin or similar tool, using the arrows as direction indicators.
- 2.Remove and replace the battery with type LR44 or equivalent.
- 3.Be sure that " + " side is up.
- 4.Replace the battery cover and lock into place.