

# INSTRUCTION



## FEATURES

- 1.Counts up from 0 to 9999.
- 2.Counts up or down from any specified value between 0-9999.
- 3.Alarms you with beep sounds when the counter reaches 0.
- 4.Counts Up/Down (In/Out) with its separate + and - buttons.
- 5.⏻: Power on/off button.
- 6.Sleep mode activates after 2 hours of inactivity to save battery power .
- 7.((•)): Beep confirmation sound is on when the symbol shows.
- 8.🔒:Lock feature prevents accidental modification.

## TO COUNT FROM ZERO

### HOW TO OPERATE

- 1.Remove battery insulation film first.
- 2.Press C button (" + ") to increase the count by 1.
- 3.Press D button (" - ") to decrease the count by 1.
- 4.The counter will alarm you with beep sounds when it reaches 0.

## TO COUNT FROM A PRESET VALUE

### HOW TO SET

- 1.Press A button and the last 2 digits will flash.
  - a.Press C button to increase the digits.
  - b.Press D button to decrease the digits.
- 2.Press A button and the first 2 digits will flash.

- a.Press C button to increase the digits.
  - b.Press D button to decrease the digits.
- 3.Hold C or D button for rapid advance when the digits are still flashing.
  - 4.Press B button to complete the setting.

## HOW TO OPERATE

- 1.Press C button (" + ") to increase the count by 1.
- 2.Press D button (" - ") to decrease the count by 1.
- 3.The counter will alarm you with beep sounds when it reaches 0.

## TO RESET TO ZERO

- 1.Press B button and a STOP sign will show on the display.
- 2.Press C or D button to count again and cancel reset.
- 3.Press B button again to reset the count to 0.

## ⏻ POWER ON/OFF

- 1.Hold D button 3 seconds to power OFF the display.
- 2.The display will blank when no activity has been detected for 2 hours.
- 3.Press any button to power ON the unit.

## ((•)) 🔒

- 1.Hold C button 3 seconds to turn the beep sounds on/off.  
( ((•)) symbol appears/disappears)
- 2.Hold both C&D button 3 seconds to turn the lock feature on/off.  
( 🔒 symbol appears/disappears)

**Note: when the 🔒 symbol shows, every button will be locked. You will need to unlock the device before starting to use it again.**

## BATTERY REPLACEMENT

- 1.Remove the battery cover on the back side of the body with a coin or similar tool, using the arrows as direction indicators.
- 2.Remove and replace the battery with type LR44 or equivalent.
- 3.Be sure that " + " side is up.
- 4.Replace the battery cover and lock into place.