



FEATURES

1. Records possession time.
2. Counts down from preset time between 0 and 99 seconds.
3. Switches between two instantly resettable preset times.
4. Restarts & Resets without stopping the countdown.
5. Shot clock rectification & violation.
6. Ideal for time-limited games or events.

TO SET THE SHOT CLOCK

1. Remove battery insulation film first.
2. Hold A button 3 seconds and the first 2 digits (1st timer) will flash.
 - a. Press C button to increase the number or hold for rapid advance.
 - b. Press D button to decrease the number or hold for rapid advance.
3. While the digits are still flashing, press A button and the last 2 digits (2nd timer) will flash.
 - a. Press C button to increase the number or hold for rapid advance.
 - b. Press D button to decrease the number or hold for rapid advance.
4. Press A button to complete the setting and the first timer will appear on the display.

HOW TO OPERATE

* When the display shows the **first timer**:

1. Press C button to start/stop the countdown on the first timer.

2. Press A button to restart (↺) the timer.
3. Press B button to reset to the original setting.
4. Press D button to switch to the second timer and start the countdown.

* When the display shows the **second timer**:

1. Press D button to start/stop the countdown on the second timer.
2. Press A button to restart (↺) the countdown.
3. Press B button to reset to the original setting.
4. Press C button to switch to the first timer and start the countdown.

RECTIFICATION

1. To correct the shot clock, the countdown shall be stopped first.
2. Hold B button 3 seconds and the digits will start to go back up incrementally.

VIOLATION

1. When the possession time reaches zero, the alarm will go off and last for 3 seconds.
2. The display will return to the first preset time.

POWER ON/OFF

1. Hold D button 3 seconds to power OFF the display.
2. The display will blank when no activity has been detected for 2 hours.
3. Press any button to power ON the unit.

((●))

- * Hold C button 3 seconds to turn the beep sounds on/off.
(((●))) symbol appears/disappears

BATTERY REPLACEMENT

1. Remove the battery cover on the back side of the body with a coin or similar tool, using the arrows as direction indicators.
2. Remove and replace the battery with type LR44 or equivalent.
3. Be sure that "+" side is up.
4. Replace the battery cover and lock into place.