


INSTRUCTION

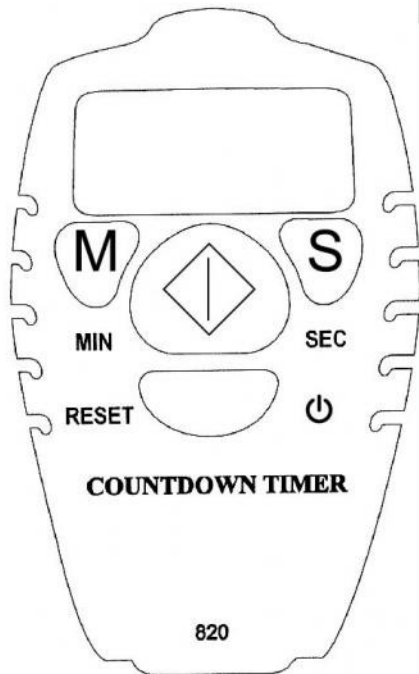

FEATURES

- 1.Countdown timer counts from 1 second to 99min 59sec.
- 2.Largest digital display.
- 3.Easiest to use.
- 4.⏻:Power on/off button.
- 5.Sleep mode after 2 hours of inactivity to save battery power.
- 6.((•)):Beep confirmation sound is on when the symbol shows.
- 7.🔒:Lock feature prevents accidental modification.

TO SET THE COUNTDOWN TIMER

- 1.Remove battery insulation film first.
- 2.Press S button to advance the seconds.
- 3.Press M button to advance the minutes.
- 4.Hold M or S button for rapid advance.

HOW TO OPERATE

- 1.Press ◊ button to start counting.
 - 2.Press ◊ button again to stop counting.
 - 3.Alarm will go off and last for 30 seconds upon completion. Display will also return to the original setting.
- Press any button to silence the alarm.

4.When the timer is stopped, press RESET button to reset to the original setting.

5.Press RESET button again to reset to 0.

Note: A STOP sign will show when the timer is stopped, disappear when the timer is running, and flash when the timer is being set.

⏻ POWER ON/OFF

- 1.Hold RESET button 3 seconds to power OFF the display.
- 2.The display will blank when no activity has been detected for 2 hours .
- 3.Press any button to power ON the unit.

((•)) 🔒

- 1.Hold ◊ button 3 seconds to turn the beep sounds on/off.
(((•)) symbol appears/disappears)
- 2.Hold both ◊ & RESET button 3 seconds to turn the lock feature on/off.
(🔒 symbol appears/disappears)

Note: when the 🔒 symbol shows, every button will be locked. You will need to unlock the device before starting to use it again.

BATTERY REPLACEMENT

- 1.Remove the battery cover on the back side of the body with a coin or similar tool, using the arrows as direction indicators.
- 2.Remove and replace the battery with type LR44 or equivalent.
- 3.Be sure that " + " side is up.
- 4.Replace the battery cover and lock into place.