



FEATURES

- 1.Countdown timer counts from 1 second to 99min 59sec.
- 2.Restarts & Resets without stopping the countdown.
- 3.Easiest to use.
- 4.⏻:Power on/off button.
- 5.Sleep mode after 2 hours of inactivity to battery power.
- 6.Beep confirmation sound is on when the symbol shows.
- 7.🔒: Lock feature prevents accidental modification.
- 8.Ideal for time-limited games or events.

HOW TO SET

- 1.Remove battery insulation firm first.
- 2.Press D button and the digits will flash.
When the timer is not running:
 - a.Press B button to advance the seconds.
 - b.Press A button to advance the minutes.
 - c.Press C button to reset the digits to 0.
 - d.Press and Hold A or B button for rapid advance.
- 3.Press D button again to complete the setting and the digits will stop flashing.

HOW TO OPERATE

- 1.Press C button to start counting.
When the timer is running:
 - a.Press A button to restart the timer. or,
 - b.Press B button to reset to the original setting. or,
 - c.Press C button to stop the timer.

- 2.Press C button to stop counting.
When the timer is stopped:
 - a.Press A button to restart the timer. or,
 - b.Press B button to reset to the original setting. or,
 - c.Press C button to start the timer.
- 3.Alarm will go off and last for 30 seconds upon completion. Display will also return to the original setting.

- Press any button to silence the alarm.

Note: A STOP sign will show when the timer is stopped, disappear when the timer is running, and flash when the display shows the original setting.

⏻ POWER ON/OFF

- 1.Hold D button 3 seconds to power OFF the display.
- 2.The display will blank when no activity has been detected for 2 hours.
- 3.Press any button to power ON the unit.

((•)) 🔒

- 1.Hold C button 3 seconds to turn the beep sounds on/off.
(((•))) symbol appears/disappears)
- 2.Hold both C & D button 3 seconds to turn the lock feature on/off.
(🔒 symbol appears/disappears)

Note: when the 🔒 symbol shows, the only thing you can do is switching between Timer and Counter modes.

To use other features, you will need to unlock the device first.

BATTERY REPLACEMENT

- 1.Remove the battery cover on the back side of the body with a coin or similar tool, using the arrows as direction indicators.
- 2.Remove and replace the battery with type LR44 or equivalent.
- 3.Be sure that " + " side is up.
- 4.Replace the battery cover and lock into place.