



## FEATURES

- 1.Count Up Timer:Counts up to 9999 sec then to 9999 min.
- 2.CountDown Timer:Counts down from 9999 sec.
- 3.CountDown Timer:Counts down from 9999 min.
- 4.Clock:Displays time in hours (A and P) and minutes format.
- 5.Beep sound or silent operation.
- 6.Lock feature protects the values from accidentally resetting.

## MODES CIRCULATION

- 1.Press M button to reach ▲ mode.
- 2.Press M button to reach ▼ S mode.
- 3.Press M button to reach ▼ M mode.
- 4.Press M button to reach ☹ mode.

## TO SET COUNTDOWN TIMER

### ▼ S/ ▼ M mode

- 1.Press M button to reach ▼ S mode or ▼ M mode.
- 2.Press B button to increase (+) the last 2 digits.  
Press D button to decrease (-) the last 2 digits.
- 3.Press A button to increase (+) the first 2 digits.  
Press C button to decrease (-) the first 2 digits.
- 4.Hold A or B or C or D button for rapid advance.

## TO SET THE CLOCK

- 1.Press M button to reach ☹ mode.
- 2.Press A or B button and ☹ symbol will flash.
- 3.Press B button to increase the minutes.  
Press D button to decrease the minutes.
- 4.Press A button to increase the hours.  
Press C button to decrease the hours.
- 5.Hold A or B or C or D button for rapid advance.
- 6.Press M button to complete the setting and return to clock display.

## HOW TO OPERATE

### ▲ mode

- 1.Press ◊ button to start counting.
- 2.Press ◊ button again to stop counting.
- 3.Press R button to reset to 0.

### ▼ S mode/ ▼ M mode

- 1.Press ◊ button to start counting.
- 2.Press ◊ button to stop counting.
- 3.Alarm sound for 30 seconds will activate upon completion and the display returns to the original setting.
- 4.Press R button to reset to the original setting.
- 5.Press R button again to reset to 0.

### STOP symbol

- 1.Time in counting:STOP disappears.
- 2.Time stopped:STOP appears.
- 3.Countdown time set:STOP flashes.

## LAST 3 MINS (180 SECS) REMINDER

1. When the countdown reaches the last 3 minutes (180 seconds), the display will convert to countdown in seconds from 2 59, 2 58, 2 57... (1 79, 1 78, 1 77...) to remind you countdown time no matter which mode you are in.
2. The return to the original mode you were previously using, simple press mode button continuously until it reaches your desired mode.



Press S button repeatedly to show the symbol ☹, ((●)), ((●)) ☹ and blank successively.

- 1.When the ((●)) symbol appears, beep and alarm sound will activate.
- 2.When the ((●)) symbol disappears, beep and alarm will not sound.

## BATTERY REPLACEMENT

- 1.Remove the battery cover on the back side of the body.
- 2.Remove and replace battery with type AAA.
- 3.Replace the battery cover and lock into place.