



INSTRUCTION

MEMORY STOPWATCH

SPLIT TIMING

1. Press "C" to move the cursor to point "STPW" ("COUNT")
2. Press "A" to start counting ("RUN")
3. Press "B" repeatedly to remember the last 8 splits ("SPLT")
 - Lower display shows cumulative split and upper display shows lap split
 - After 5 seconds, the unit will unlock splits to display current running split time
4. Press "E" to recall the last 8 splits ("RECL")
5. Press "A" to stop counting
6. Press "B" to reset to zero

START-STOP TIMING

1. Press "A" to start counting ("RUN")
2. Press "A" repeatedly to remember the last 8 time-outs ("STOP")
3. Press "E" to recall the last 8 times-outs ("RECL")
4. Press "A" to stop counting
5. Press "B" to reset to zero

AUTO REPEAT COUNTDOWN TIMER

1. Press "C" to move the cursor to point "AUTO" ("AU")
2. Press "D" to adjust the timer
 - Press "B"→hours, Press "E"→minutes, Press "A"→seconds
 - Press "A" & "B" at the same time to reset digits to zero
3. Press "A" to start countdown timing
4. Press "E" to show the time from start ("▲")
5. Press "E" again to return to countdown ("▼")
6. Press "A" again to stop counting
7. Press "B" to return to the original setting
8. Time is up and the counter records "01", "02"....

DUAL DISPLAY TIMER

1. Press "C" to move the cursor to point "DUAL" ("SU" or "Id" or "UP")
2. Press "E" to change the dual display timer
3. Press "D" to adjust the timer on the lower display

Press "D" again to adjust the timer on the upper display

- Press "B"→hours, Press "E"→minutes, Press "A"→seconds
- Press "A" & "B" at the same time to reset digits to zero
- Press "D" again to complete the settings

4. "SU" - Two countdown timers work simultaneously
 - Press "A" to start Press "A" to stop ("STOP" flashes)
 - Press "B" to reset to the original settings

- "Id" - Two countdown timers work independently
- Press "A" to start/stop lower display
 - Press "B" to start/stop upper display
 - Press "A" & "B" at the same time to reset to the original settings

- "UP" - Two count up timers work independently
- Press "A" to start/stop lower display
 - Press "B" to start/stop upper display
 - Press "A" & "B" at the same time to reset to zero

※ "STOP" flashes - To pause the timer but still in working

PACER WITH COUNT UP TIMER

1. Press "C" to move the cursor to point "PACE" ("PC")
2. Press "D" to adjust the frequency
 - Press "A" to increase the digits
 - Press "B" to decrease the digits
3. Press "A" to advance digits per pacer beep
4. Press "A" again to the stop digit advancement
5. Press "B" to reset to zero
6. Press "E" repeatedly to turn the pacer's beep ON or OFF and the symbol ((())) will appear or disappear
7. Upper display shows count up timer to see the time passed by

16 PRESET COUNTDOWN TIMER

1. Press "C" to move the cursor to point "1-60"
2. Turn the rotary switch to the desired minutes (1f-60f)
3. Press "A" to start countdown timing
4. Press "A" again to stop countdown timing
5. Press "B" to return to the original setting

TO SHOW COUNT UP TIMING

1. When the time is not up,
 - a. Press "E" to check the time from start ("▲")
 - b. Press "E" again to return to countdown ("▼")
2. When the time is over,
 - a. Press "E" to check the time from start ("▲" flashes)
 - b. Press "E" again to show overtime ("▼" flashes)

ALTERNATION OF MODES AND FUNCTIONS

Please reset the present display to zero or original setting, then press "C" to change the mode or Press "E" to change the function of dual display timer.